

Basic Start Up Parameters for J & M Type Drives.

M TYPE		Notes.	J TYPE			
De-Fault	Set To.		Parameter	De-Fault	Set To	
1	3	Enables read/write to all parameters.	P00	1	1	
60	xx	Motor nameplate frequency (base frequency)	P04	60	xx	
or 440	xxx	Motor nameplate voltage	P03	220	xxx	
60	50	Max o/p frequency = max speed required	P02	60	50	
Drive rating	xx	Motor nameplate FLC (full load current)	P23	Drive rating		
0%	xx	Minimum frequency ie minimum speed.	P29	0	xx	
		Set as a percentage of max frequency P02.				
011	0011	Run/stop and frequency reference via dig. controller	P81	0	0	Speed control
011	0000	Run/stop and frequency reference via an. controller	P81	0	1	Speed control
	0	Parameters 0-19 Read only. All protected.	P00	1	0	All protected

To enable control from external switches/ buttons and potentiometer
Parameter P01 must be configured to your required system.
Refer to the Manual for details.

ACO Westinghouse 

ELECTRIC EUROPE LIMITED

ACP&D Limited
86 Rose Hill Road,
Ashton-under-Lyne,
Lancashire,
England,
OL6 8YF.

Tel: +44 (0)161 343 1884
Fax: +44 (0)161 343 7773
e-mail: sales@acpd.co.uk
Websites: www.acpd.com &
www.acpd.co.uk